



## How to set PTZ Presets


1. Login to your PTZ from the web interface.

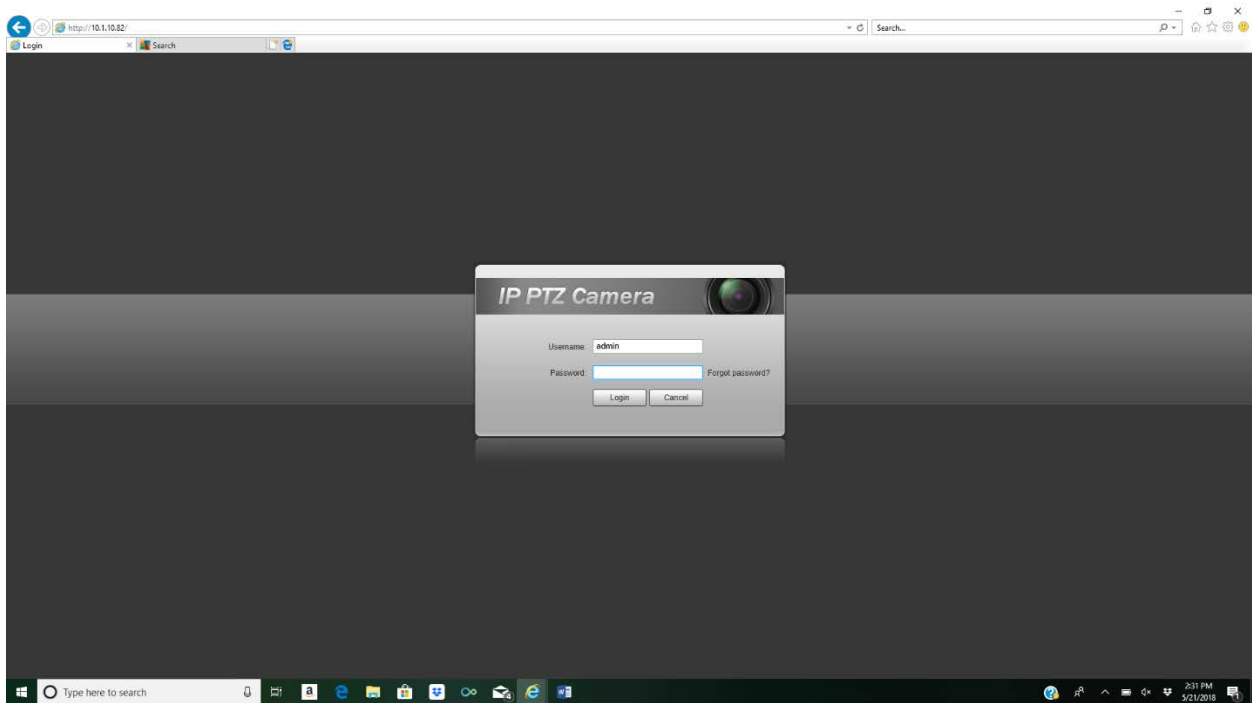

2. Go to settings

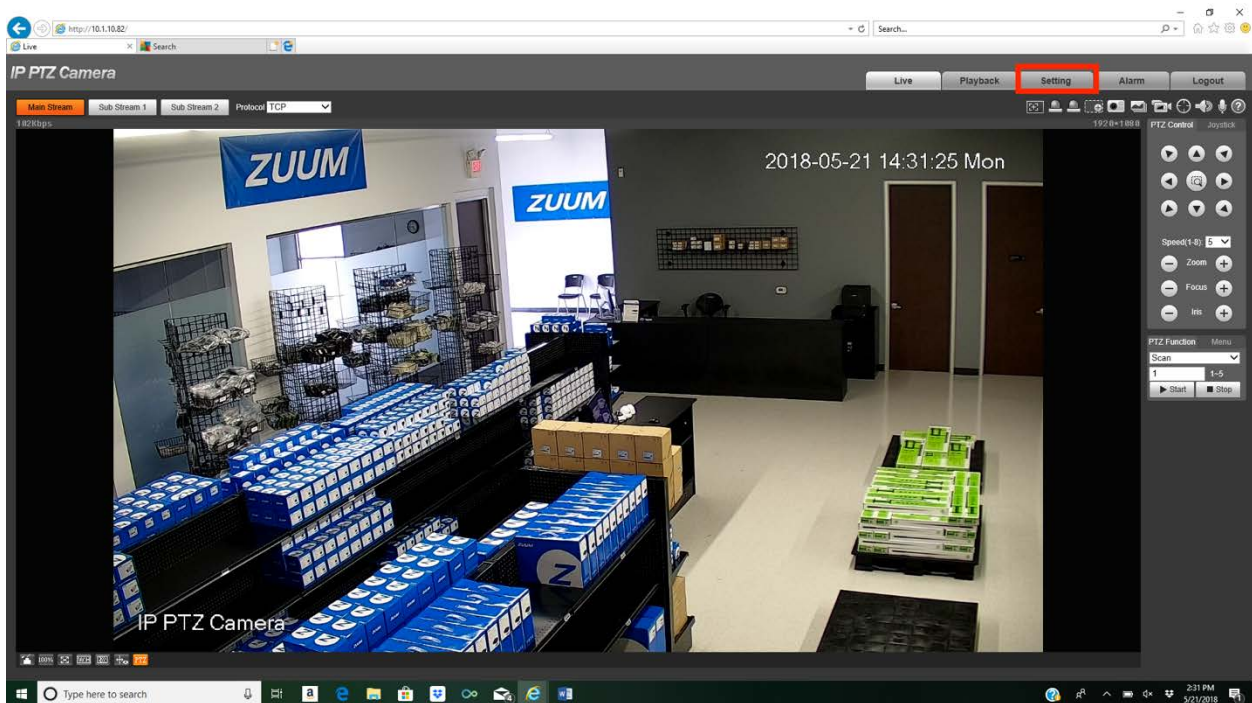

3. Under settings, select “PTZ” under “PTZ” select “Function”

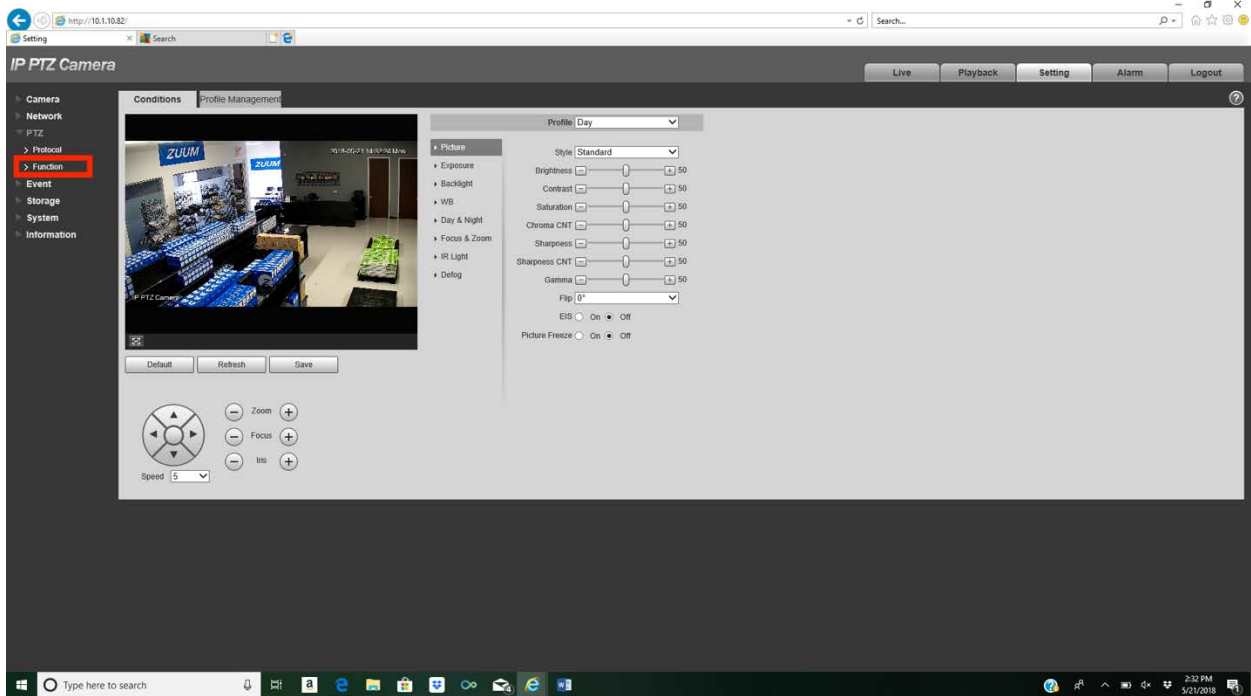

4. Under “Function” select “Preset” once here you can move the PTZ to the location you would like to set your first preset. Once you find the right spot, while still showing the desire location click on “Add” once preset has been added you will have to click “Save” (Right next to Preset 1 as show on example below. Once you are done adding and saving all of your presets you are now done.

