



## How to set PTZ Scan


1. Login to your PTZ from the web interface.

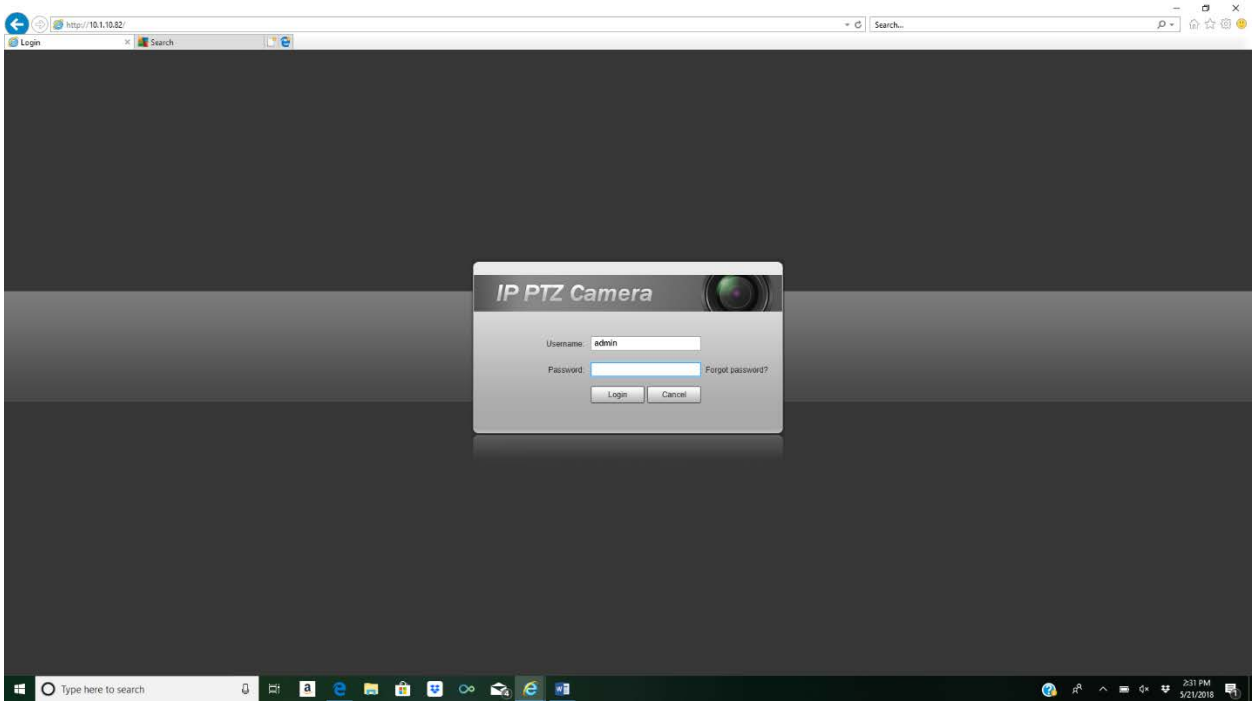


2. You will go to settings, under settings you will click on “PTZ” under “PTZ” click on “Function” Under function click on “Scan” Here you will click on “Setup”

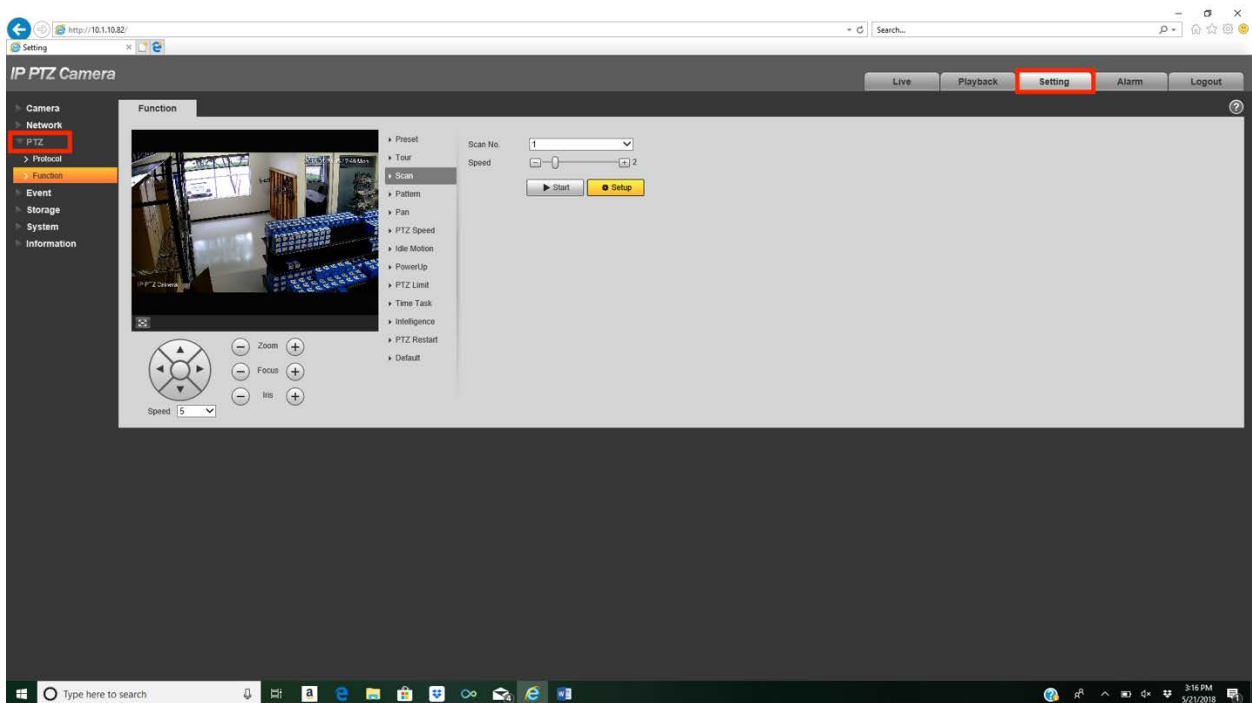

3. Under “Setup” you will move the PTZ camera to select what section you want the scan to start from. Once you have the left side you will click on “Set Left Limit”

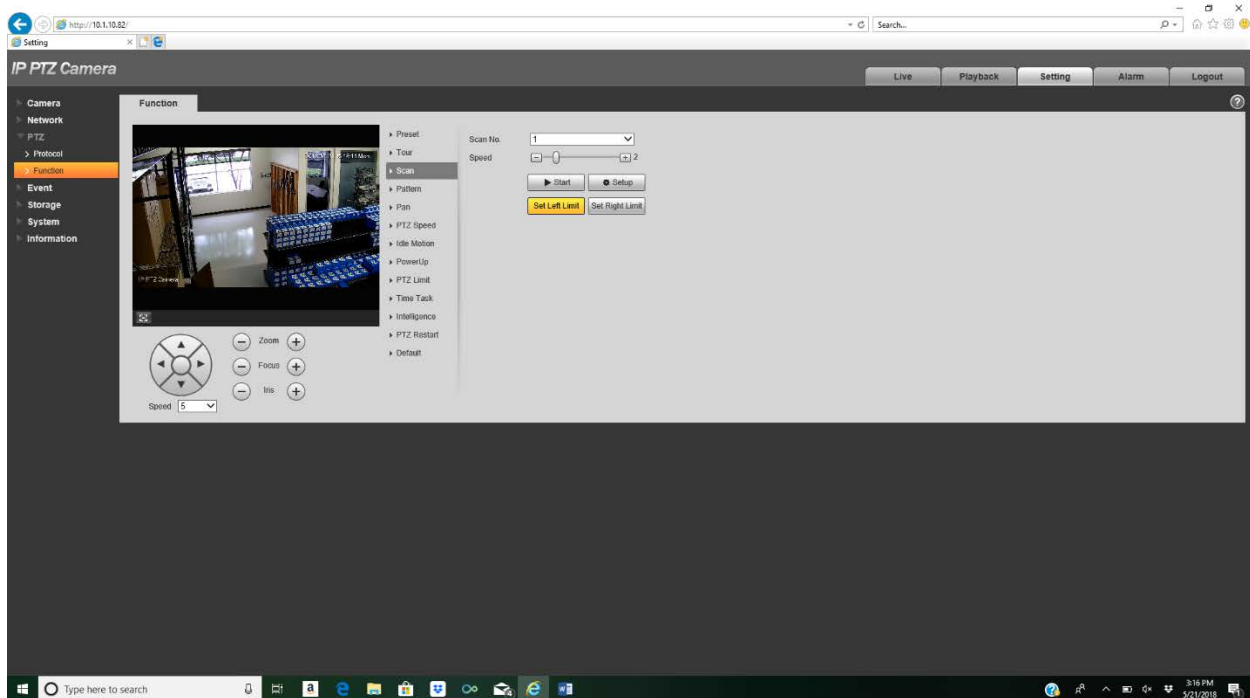

4. You will now move the PTZ and select the right-side limit of the scan

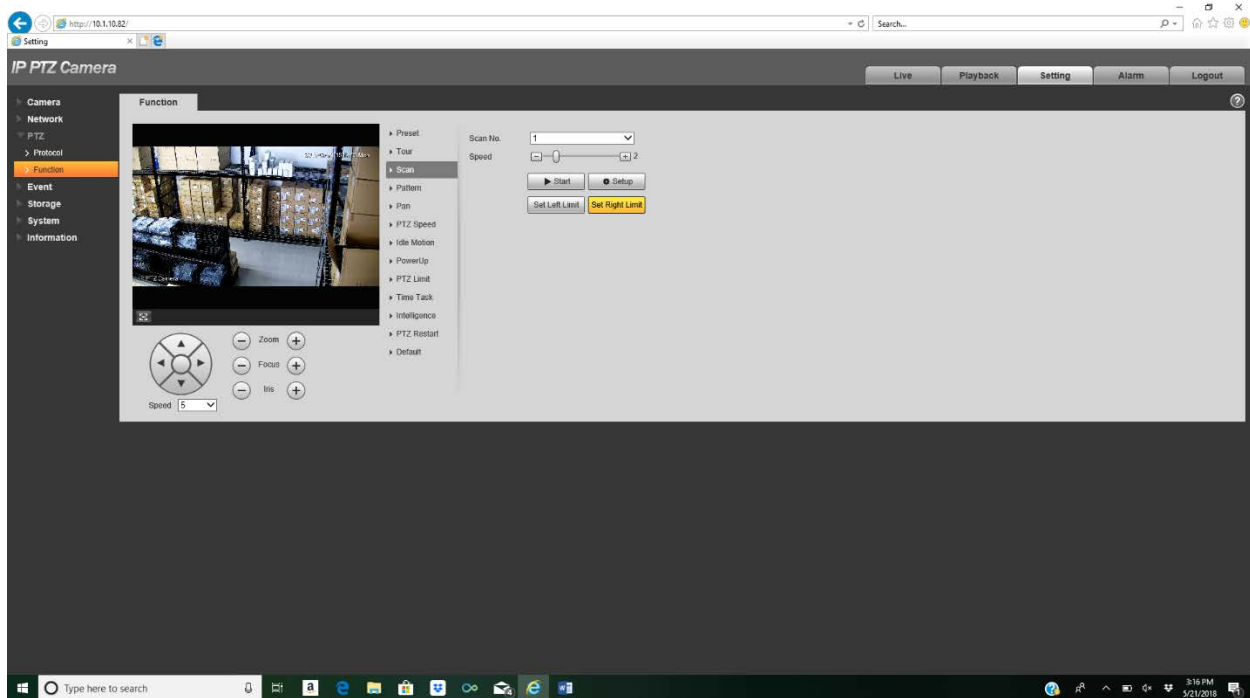

5. Once you have both sides selected, you will now click “Start” the PTZ will start scanning from left to right according to the limits you set.

